

Ring Indoor Cam Plus

Woven Pot Housing Installation

Designed and Printed by TML Fun Creations

Follow these three steps to seat and align your camera in the woven pot housing. The camera base stays attached.

Step 1 Rotate the base

Rotate the camera base 90 degrees, as shown in the photo.




Step 2 Seat the camera

Place the camera into the housing, inserting the camera base into the hole at the bottom. If needed, reach through the cord opening with a finger to help guide and fully seat the base in the hole.




Step 3 Align the front

Rotate the camera until its front sits flush with the front opening of the housing.

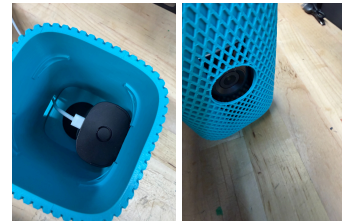

View from the installed camera

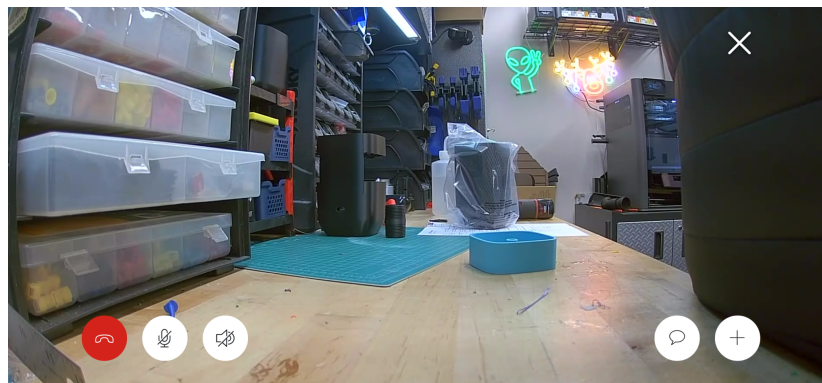

Check the live view in the Ring app to confirm the housing does not block the image.